

6. MIDI Mode

K2500 / X MIDI Mode

MIDI Mode K2500/X MIDI
MIDI MIDI Mode 가

MIDI Mode : TRANSMIT

Ctl Setup : **97 Control Setup**
Channel : 1 ProgChng : On
Transpos : 0 ST Buttons : Off
Control : Both ChgSetups : KeyUp
VelocMap : 1 Linear
Press Map : 1 Linear

XMIT **RECV** **CHNLS** **PrgChg** **RsetCh** **Panic**

MIDI Mode MIDI (XMIT-Transmit) MIDI
Channels) (RECV-Receive) , (CHANLS-

MIDI Mode : TRANSMIT - MIDI Mode Transmit RECEIVE
REC V

Transmit,Receive,Channel

XMIT - MIDI
RECV - MIDI
CHANLS -

XMIT (Transmit) Page

MIDI Mode : TRANSMIT

Ctl Setup : **97 Control Setup**
 Channel : 1 ProgChng : On
 Transpos : 0 ST Buttons : Off
 Control : Both ChgSetups : KeyUp
 VelocMap : 1 Linear
 Press Map : 1 Linear

XMIT **RECV** **CHNLS** **PrgChg** **RsetCh** **Panic**

CtlSetup (Control Setup) - K2500/X

CtlSetup Edit Setup Setup
 9 . (Zone .)

Channel - MIDI

Transpose - K2500/X MIDI
 .(K2500/X .)

Control - Local Control K2500/X 가
 가 가 MIDI Out 가 (Local),
 가 가 MIDI Out (MIDI) K2500/X
 가 가 MIDI Out (Both)

VelocMap (Velocity Map) - K2500/X MIDI Out
 (Velocity ,) .(
 K2500/X
 .)

PressMap (Pressure Map) - K2500/X MIDI Out
 (After Touch,)
 .(K2500/X
 .)

ProgChng (Program Change) - K2500/X K2500/X
 (On) , (Off)

Buttons -	K2500/X	K2500/X
Kurzweil	(K2000,K2500,K2500/X)	System Exclusive
(On)	(Off)	.
On	K2500/X	K2500/X
	K2500/X	.
ChgSetups -	K2500/X	Setup mode Setup K2500/X
	.	
KeyUp	Setup	가 Setup 가
		Setup
Immed (Immediately)		Setup
	Setup	.

RECV (Receive) Page

MIDI Mode : RECEIVE

Basic Channel : 1	SysExID : 0
MIDI Mode : Multi	SCSI ID : 6
AllNotesOff : Normal	BendSmooth : On
ProgChgType : Extended	LocalKbdCh : None
VelocMap : 1 Linear	BankSelect : Ctl 32
Press Map : 1 Linear	PowerMode : User
XMIT	REC
CHNLS	PrgChg
	RsetCh
	Panic

Basic Channel -	K2500/X	MIDI
	.	
MIDI Mode -	K2500/X	MIDI
Omni -	K2500/X	MIDI
	.	
Poly -	K2500/X	MIDI
	.	Poly
		가
Multi -	K2500/X	MIDI
	.	
	.	
AllNotesOff -	All Notes Off	(Normal)
(Ignore)	.	

ProgChgType - MIDI Program Change

VelocityMap - VTRIG

PressureMap - K2500/X 가

SysExID (System Exclusive ID) - MIDI ID

SCSI ID - K2500/X SCSI ID

BendSmooth - K2500/X MIDI Guitar Controller K2500/X

LocalKbdCh - K2500/X None ()

가 1
1
가
> LocalKbdCh : 1 : 1
: 5
5 가
LocalKbdCh : 1 : 2
: 5
K2500/X
LocalKbdCh : None : 1
: 5
1 가

BankSelect - K2500/X Bank Select

PowerMode - K2500/X

		Demo	User
Master Mode	KB3 Channel	1	

MIDI Transmit Mode	Control	Both	
	Channel	1	
	Transpose	0 ST	
Effects Mode	FX Mode	Auto	
	FX Channel	Current	
Disk Mode	Current Disk	Floppy	

User 가 setting .

CHANLS (Channels) Page

MIDIMode : CHANNELS <>**Channel : 1**

Enable : **On**

Program : 1 Acoustic Piano PrgLock : Off

Pan : 64 PanLock : Off

Volume : 127 VolLock : Off

OutPair : Prog

OutGain : Prog

XMIT **RECV** **CHNLS** **PrgChg** **RsetCh** **Panic**

Enable -

Program - MIDI PrgLock On

Pan- Output MIDI PAN(MIDI 10) PanLock On

Volume- PAN(MIDI 7) VolLock On MIDI

OutPair -

OutGain -

PrgLock , PanLock , VolLock (Program Lock, Pan Lock , Volume Lock) - On
Program Change, Pan , Volume MIDI

가 , , MIDI 가

PrgChg (Program Change) Page

Send Program Change :

On Channel 1 , Send Program 0

Chan -

Chan +

Prog -

Prog +

Send

Cancel

+) (Chan- , Chan +) (Prog -,Prog
. (Send)
K2500/X 3 31
Chan +,Chan - On Channel 3
Send Program 31 Send .

RsetCh (Reset Channel)

가 K2500/X Yes CHANLS

Panic

MIDI All Notes Off All Controllers Off K2500/X .