

10. Program Mode (4)

K2500 / X Program Edit Mode

Effect Page

Edit Prog : EFFECT All Layers
Effect Preset : 1 Sweet Hall

	Adjust :	Source :	Depth :	
Wet/Dry Mix	: 0 %	OFF	0	
None	: 0	OFF	0	
None	: 0	OFF	0	
<more	OUTPUT	EFFECT	COMMON	SetRng more>

Effect (All Layer)

1. Effect Preset : 1 Sweet Hall

Effect Mode K2500/X 가
가

2. Adjust

(Wet/Dry Mix , None- 가
.)

3. Source

(Wet/Dry Mix , None- 가
.)

4. Depth

Source

> 199 Default Program Edit
Effect Page . (KeyMap Page Keymap
154 Square Wave ..)

Effect Preset : 28 Chor – Dly Hall (Chorus Delay Hall)

Wet/Dry Mix : 30 % Adjust Source Depth
Pwheel 15

Pitch Wheel () 가
30% 가 Pitch Wheel
15 가

5, None

None Effect Preset
Delay 가 (Room Volume)
가

Common Page

Edit Prog : COMMON All Layers
Pitch Bend Range : 200 ct Global : Off
Monophonic : Off

<more OUTPUT EFFECT COMMON SetRng more>

Common

1.Pitch Bend Range : 200 ct

(Pitch Wheel) ()
200 ct , 가

2.Monophonic : Off

(Monophonic)
Monophonic On
()

Edit Prog : COMMON All Layers

Pitch Bend Range : 200 ct Global : Off

Monophonic : On

Legato Play : On

Portamento : Off

Portamento Time : 70.0 Key/s

Attack Portamento: On

<more OUTPUT EFFECT COMMON SetRng more>

LegatoPlay : On

On

가

Portamento : On

Portamento . On

가

가

.

Portamento Rate : 70.0 key/s

가

.

AttackPortamento : Off

On

Portamento 가

가

Off

Legato

(

)

Portamento 가

.

3.Globals : Off

Globals 가 On

LFO 2, ASR 2, FUN 2, FUN 4 가

G

가

.(> GLFO,GASR..)

SetRng

(Range)

LAYER Page

LoKey,HiKey

(SetRng)

" Strike Low Key..."

가

, " Strike High Key..."

가