


5. Song Mode (5)

K2500 / X Song Mode ,
(Arrange) .


Arrange
Arrange K2500 /X

()
Step 16 가
32 32 가 .(16 가 .)
16 가 .)

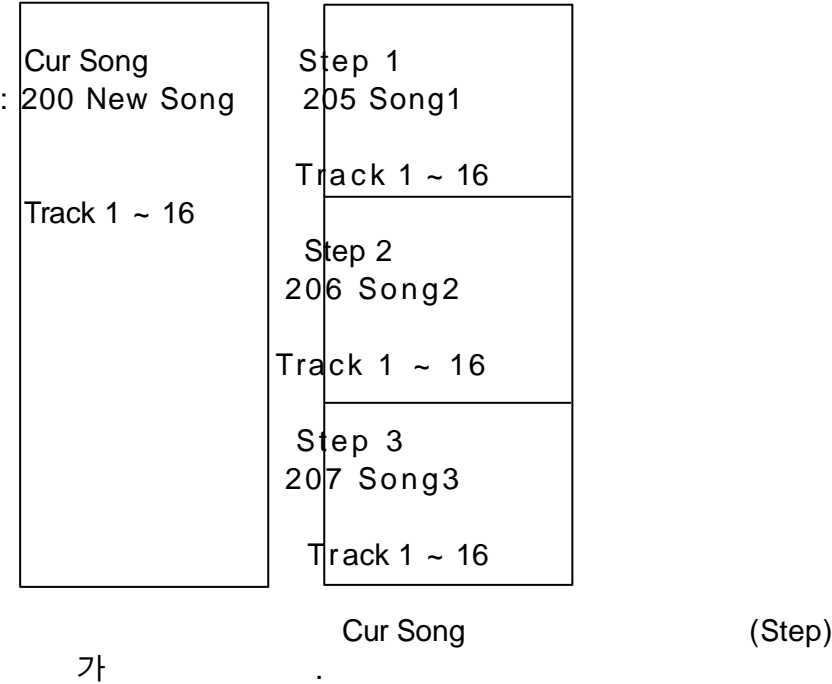

()

Step 가 가 (가) Step .

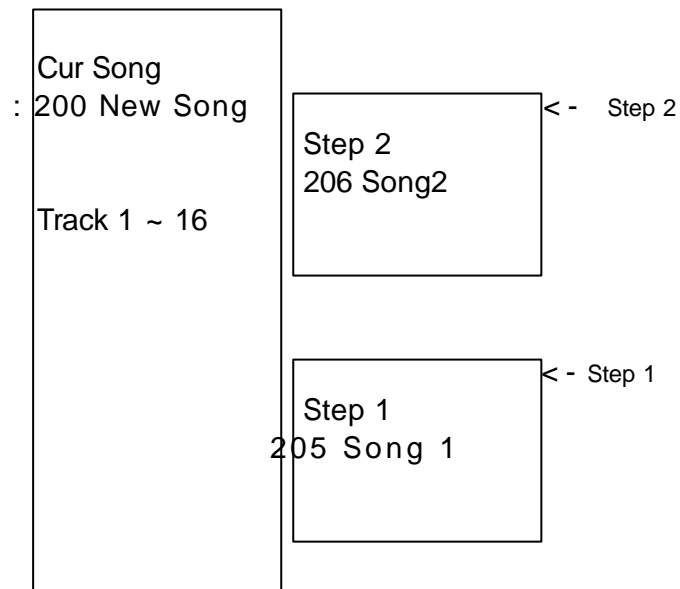

8. ARRANG

()

Edit Song : ARRANGE <> Step: 1 / 1

Step : 1

Song : 0 None

Mutes : - - - - -

Xpose : 0 st Times : 1 x Mode : Next

LoKey : Off HiKey : Off Latch : Off VelTrk : On

Add Delete SetRng Play Stop Done

:
 Edit Song : ARRANGE - 가 ARRANGE
 .
 <> Step: 1/1 - 가 Step
 Step . (Chan/Bank
 .)
 :
 Step : 1 - Arrange Step
 가
 Chan/Bank .
 Song : 0 None - Step Song .
 Mutes : - Song . (
 ‘ - ‘ 가 ‘ M’ ARRANGE
 .)
 Xpose : 0 st - Step Song
 . Xpose Arrange
 (ST)
 . (Edit: COMMON Drum Track
 .)
 Times : 1 x - Step Step
 . Inf Stop
 .
 Mode : Next - Arrange Step Step
 (Next) (Stop)
 .
 4 가 Arrange
 . ‘ Edit Song: COMMON’ ‘ TriggerCtl’ 가 On
 Arrange
 MIDI .
 LoKey : Off - Arrange Chan
 가 . Low Key
 Xpose Song
 . 가
 . Edit Song:COMMON Drum Track

HiKey : Off - Step Low
 Key(Lo Key) High Key (hi Key) Step

 Latch : Off - Off Step
 On 가 Stop

 VelTrk : On - On 가
 Step 가 Off
 Song .(
 ..)
 :
 Add - Step 가 Step
 가 .
 Delete - Step Step
 :
 SetRng - LoKey HiKey
 Low Key (Strike Low Key..)가 Low Key
 High Key High Key (Strike High Key..) 가
 High Key LoKey HiKey
 :
 Play - Play
 Stop - Play
 Done - Edit :ARRANGE Edit : COMMON

K2500 /X
 K2500 /X