

9. Setup Mode (5)

K2500 / X Setup Mode Setup Mode

K2500/X 4 FOOTSW (Switch Pedal 1 4
) 2 SWITCH (2 Panel Switch) 가

K2500/X On/Off

()

FOOTSW (Foot Switch) Page
FOOTSW

Edit Setup : FOOTSW						<>Zone 1 / 1	
SwType:Dest:		On:	Off:	Ent:	Exit:		
FtSw1:	Moment Sustain	127	0	None	None		
FtSw2:	Moment SostPd	127	0	None	None		
FtSw3:	Moment SoftPd	127	0	None	None		
FtSw4:	Moment Off	127	0	None	None		
<more	SLIDER	SLID / 2	FOOTSW	CPEDAL	more>		

K2500 Switch Pedal

Switch Pedal

4

SwType (Switch Type) -

4

Moment , Toggle - Moment Toggle

가 .(Moment)

(Toggle)

Moment

Toggle

Note M(Note Moment) , **Note T** (Note Toggle)- K2500 Foot Switch
Panel Switch
Note M,Note T

Note M 가 가
.(
.Setup 89 A2 Foot Drummer 가
Setup Switch Pedal 1 Bass Drum 가
.)
Note T 가 가
.(
.)

Dest (Destination) - 가
.(Note M Note T
.)
Performance Guide Manual 7-21
7-23

On - 가 . (Note M Note T
Velocity .)

Off - 가
가 Pedal () 127 90

SwType:Dest: On: Off: Ent: Exit:
FtSw1: Moment volume 127 90 None None

Switch Pedal 1 127
90

Ent (Entry Value) -

Ex (Exit Value) -

FOOTSW 1~ 4

Panel Switch (SWITCH)

SWITCH

Edit Setup : SWITCH <>Zone 1/1

	SwType:Dest:	On:	Off:	Ent:	Exit:
PSw1 :	Toggle Off	127	0	None	None
PSw2 :	Toggle Off	127	0	None	None

<more RIBBON WHEEL SWITCH PRESS more>

	SWITCH	Panel Switch	SwType
dDest(Destination) , (Ent, Exit)	(On)	(Off)	,
		.	

FOOTSW

switch Type Controller .

Switch Type Controller

Utility (Name, Save, Delete, Dump , NewZn, DupZn, ImpZn , DelZn , Copy , Paste , Clear , SetRng , COMMON)