

5. Song Mode (1)

K2500 / X Song Mode .

Song Mode Song Song

Mode 가 ?

Song Mode : MAIN Events: 186K STOPPED .

CurSong : 1 NewSong Tempo : 120

RecTrk : 1 Vol : 127 Pan : 64 Mode : Merge

Program : 1 Acoustic Piano Locat: 1 : 1

Track : R - - - - - - - - - - - - - - -

Channel: 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16

Record Play Stop Erase MISC MIXER

Song Mode .

:

Song Mode : MAIN - Song Mode MAIN .

Events : 186 K - guswo RAM .

P-RAM2 , RAM

STOPPED : Recording

Playing .

:

CurSong : Current Song , 가

:

Tempo : () 가

:

RecTrk : 가 .

Vol : Rec . (0 가 127

가 .)

Pan : Rec (Pan) .

0 ←----- 64 -----→ 127

Mode :
Merge :
4
Erase :
Mode Erase
가
가
가
가
Program : Program
Locat : 1 : 1 :
가 4
() 4 : 1
Track : 1 16
R : RecTrk
P : 가 (Play) 가
M : 가 (Mute)
- :
Channel : 가
Record :
Record Ready 가 .(가 ... Record Rec Play
Play : Play
(Play)
Stop : Stop
Locat 1 : 1
Erase : RecTrk ()

MISC : Song Mode
(Miscellaneous Page)

Mode

MIXER : Pan
.
(
.)

1 > K2500 / X

1

(1) CurSong 1 New Song . (New Song
New File
NewSong .)

(2) Tempo Record Play .
K2500/X (! , ! ...) 가
Tempo
가 Stop

(3) Save this song? 가
No . Tempo 가
가 .

(4) Program

(5) Record Play

(6) 가 Stop

(7) Save this song? 가
Play Stop Yes No 가
Play , Stop
Yes ,
No Yes
가 .

(8) Save NewSong as: ID # 200 가
Save

(9) Program RecTrk 2

(5),(6)
(10) Stop
PlayOld Save this song? PlayNew Stop Yes

No 가 . (7)
 PlayOld PlayNew PlayOld
 (1 2)
 PlayNew (Yes
 ...) No .
 (11) 가 Save
 Replace .
 ID 가 Replace
 (12) . (-
 .)
 Play 가 가

MISC Page (Song)

MISC Page
 Song Mode MAIN MISC MISC Page .

Song Mode: MISC		Events : 121 K	STOPPED
RecMode : Linear	Quant : Off	CountOff:1	
PlayMode : Loop	Grid : 1/16	Click : Rec	
KeyWait : Off	Swing : 0 %	ClickCh : 16	
Locate : 1: 1	Sync : Off	ClickPrg : 198	
AutoIn : 1: 1	Clock : Int	ClickKey : C4	
AutoOut : 1: 1	Tempo : Auto	ClickVel : 100	
Record	Play	Stop	New
		In/Out	MAIN

:
 Song Mode : MISC – Song Mode MISC
 Events : 186 K – guswo RAM
 P-RAM2 , RAM
 STOPPED : Recording
 Playing

:
RecMode :
 ● End Point - K2500 / X End Point
 Linear : End Point End Point
 FixLen : End Point
 Loop : End Point
 (End Point 가 2 1 가) RecMode
 Loop Main Mode merge
 Snare , Hihat
 UnLoop : UnLoop Stop
 Auto : Punch In .(Auto In Auto Out
 .)
 .)

PlayMode :
 Linear - (CurSong)
 Loop -
 List -
 Chain - Edit Song Mode Chain to 가
 Chain to

KeyWait : On Play K2500 /
X 가 .

Locate : . (7
7:1 Play Record
.)

AutoIn : Punch-In Record
.

AutoOut : Punch-In Record
.

Quant : Track Edit Mode Quantize —
Stop K2500 / X 가
- (Quantize) . 100%
. Off
. (Track Edit
.)

Grid : (Quantize) .

Swing : .

Sync : MIDI .

Clock : MIDI K2500 / X
(Int) K2500 / X 가 가
(Ext) .

Tempo : (Fixed)
(Auto) .

CountOff : .
Off .
-1:1 가 (Countoff) .

Click : .
Off —
Rec —
On - Play 가 가
Cnt -

ClickCh : .

ClickPrg : .

ClickKey : .

ClickVel : Velocity .

Record :
Ready 가 Record
.(가 ... Record Rec
.) Play

Play : Play
(Play) .

Stop : Stop
Locat 1 : 1 .

New : NewSong .

In/Out : Auto In , Auto Out AutoIn AutoOut
Auto In/Out
Auto In/Out .

MAIN : Song Mode Main .

K2500 / X Track Edit Step Recording